

Water Reservoir Install

Connect HHO Supply to Engine Air Intake

Dry Cell designs do not require much vacuum pressure to operate.


Generally the best place to connect the HHO output line is somewhere between the air filter box and the throttle body.

The connection point can be from six inches to 18 inches away from the throttle body, and it's important to be installed after any mass air flow sensor (at least 6 inches away).

After drilling a test hole, verify with your finger there is only a slight amount of vacuum at the hole location both during idle and while rev'ing the engine.

Too much vacuum will pull the water out of the tank and into the engine. It will also cause the tank to collapse.

On diesel engines, the HHO is supplied before any turbo units.

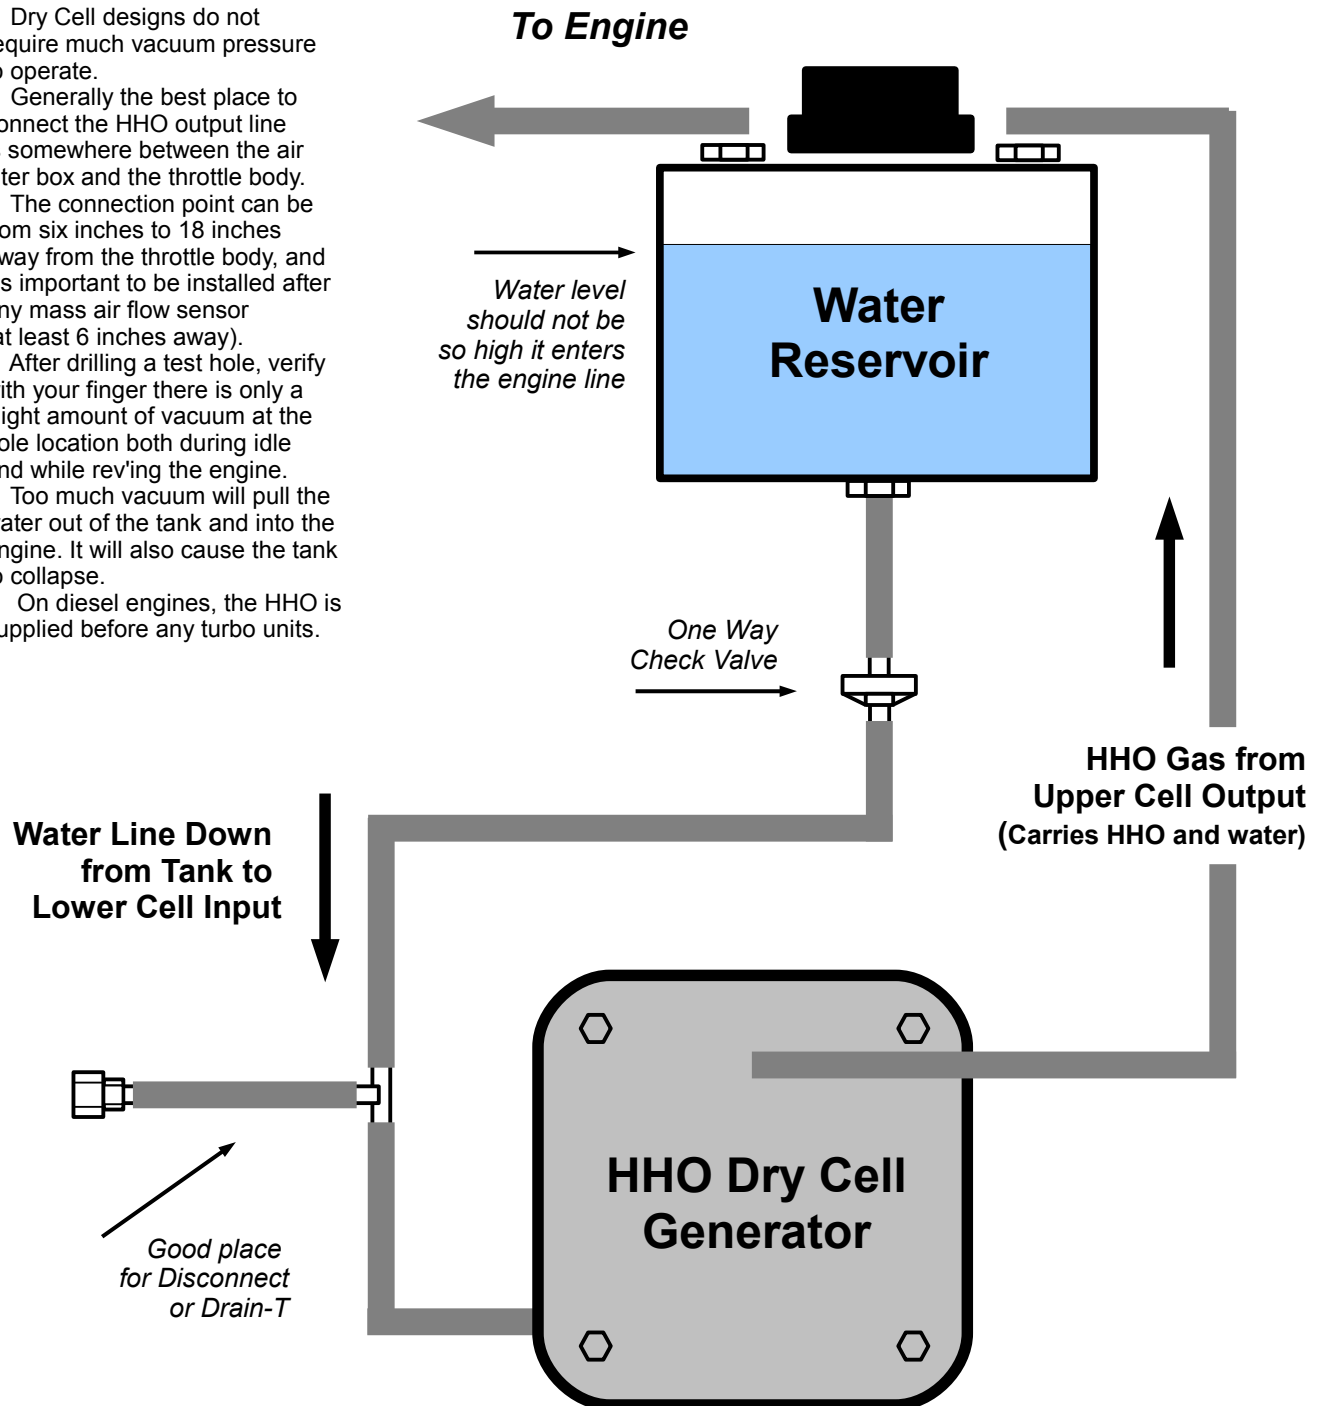

Install Note: The water is gravity fed into the fuel cell. Please install the cell below the reservoir to keep a fresh supply of water circulating.